


OPERATING YOUR 1 LEVER MECHANISM

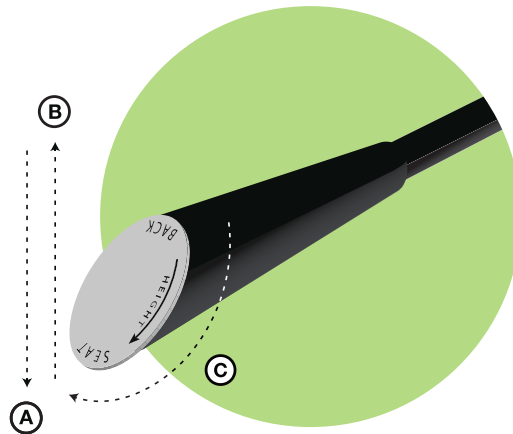

A) SEAT TILT

To adjust the 'Seat Tilt', PUSH the lever DOWNWARDS and hold until your desired position is set. Then release.

B) BACK TILT

To adjust the 'Back Tilt', PULL the lever UPWARDS and hold until your desired position is set. Then release.

C) SEAT HEIGHT ADJUSTMENT

To adjust the 'Seat Height', ROTATE the lever FORWARDS to achieve your desired height. Then release.

Note: When raising the height, remove your body weight from the seat.

Please note: The lever does not rotate backwards.